50-Disc
Multi-CD Player

OWNER'S MANUAL

Thank you for purchasing this PIONEER product. Before attempting operation, be sure to read this manual.

Muchas gracias por la adquisición de este producto PIONEER. Antes de tratar de operarlo, lea atentamente este manual.

Muito obrigado por comprar este produto PIONEER. Leia este manual de instruções completamente antes de usar a unidade.

شكرا لك على شرائك جهاز بايونير هذا. قبل محاولة تشغيله تاكد من
قراءة هذا الدليل.

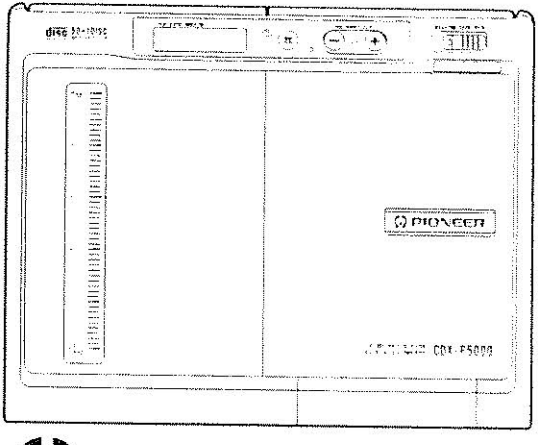

PIONEER®

The Art of Entertainment

CDX-P5000

Contents/Indice

English

Precautions 4

Using the Compact Disc Magazine ..... 5~10

- Inserting a disc in the magazine 5
- Removing a disc from tha magazine 6
- Loading tha magazine 7
- Loading tha Discs in the magazine in the selected order 8
- Unloading tha Disc with the Selected Disc No. .... 9~10

Playing Compact Discs ..... 11~19

- Start the CD player 11
- Select the disc you want to hear 12
- Selecting the Play Mode 13
- Dividing up Discs into Groups 14
- Playing a Group 15
- Deleting a disc from a music group 16
- Playing discs that are listened to daily separately from discs that are seldom listened to 17
- Playback from Disc Title 18
- Display shows this message 19

Pressing the Clear Button 20

Discs 20

Transportation of multi-CD player ..... 21~22

- Removing the Transport Screws 21
- Transporting the Player to a New Location 22

Specifications 23

Español

Precauciones 24

Usando el magazine de disco compacto ... 25~30

- Colocando un disco en el magazine 25
- Extrayendo un disco desde el magazine 26
- Colocando el magazine 27
- Colocando los discos en el magazine en el orden seleccionado 28
- Extrayendo el disco con el número de disco seleccionado usando el controlador de múltiples CD ..... 29~30

Reproduciendo discos compactos ..... 31~39

- Inicie el reproductor de disco compacto 31
- Seleccione el disco que desea escuchar 32
- Seleccionado el modo de reproducción 33
- Dividiendo los discos en grupos 34
- Reproduciendo un grupo 35
- Borrando un disco desde un grupo musical 36
- Reproduciendo discos que se escuchan diariamente separados de los discos que no se escuchan tan frecuentemente 37
- Reproducción usando los títulos de disco 38
- La presentación muestra este mensaje 39

Presionando el botón de borrado 40

Discos 40

Transporte del reproductor de múltiples CD ..... 41~42

- Extrayendo los tornillos de transporte 41
- Transporte del reproductor a una nueva ubicación 42

Especificaciones 43

Precautions

CAUTION:
USE OF CONTROL OR ADJUSTMENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
CAUTION:
THE USE OF OPTICAL INSTRUMENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

In case of trouble
When the unit does not operate properly, contact your dealer or the nearest authorized PIONEER Service Station.

- *When driving on an uneven road, the player may not reproduce every sound properly.*
- *During winter the inside of the vehicle may be very cold. If the heater is turned on and the player is used soon after, the disc or optical parts (prism, lens, etc.) may become misted up, and the player will not operate correctly. If the disc is misted up, wipe it with a soft cloth. If the optical parts are misted up, wait for about an hour for them to warm up. They will return to their normal condition.*

Explanations in the Manual

- This manual explains operations which differ in some respects from other 6 and 12-disc multi-CD players, and the operation of new functions. Other functions operate the same as with other players. Please refer to the user's manual for your multi-CD controller.
- The operation illustrations in this manual show the KEH-P8450 as an example. The operations of the multi-CD controller are explained in KEH-P8450 manual. The illustrations may be different in the case of other multi-CD controllers.

In combination with multi-CD controllers

Music Group Play, Frequency Play, "ABC" Disc Title Search and other functions unique to this product cannot be used with the multi-CD controller mentioned on the right.
Multi-CD controllers previous to the product mentioned on the right cannot be connected to the player.

KEH-P4450, DEH-P823, DEH-P723, FH-P80

Inserting a disc in the magazine

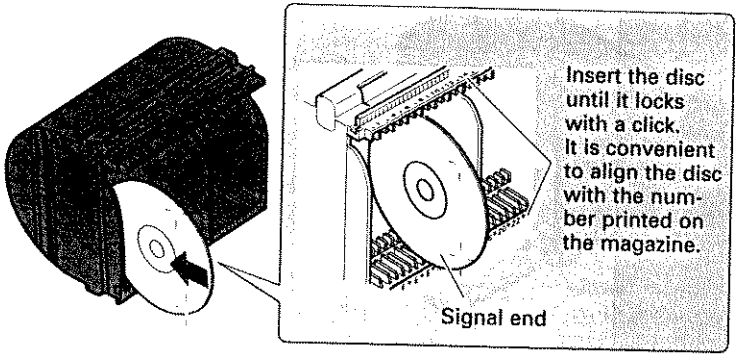
Insert the disc until it locks with a click. It is convenient to align the disc with the number printed on the magazine.
Signal end

Do not use an 8 cm CD without the special 8 cm CD adapter, or the player may fail.
To load an 8 cm CD, you need a special 8 cm CD adapter (Part No. CXB1178). Ask your Pioneer Service Station about it.

Check to make sure the disc is aligned with the grooves in the top and bottom.
- Does the disc fly out of the magazine?
- Does the lock button return fully?

If a disc is inserted without being aligned properly in the top and bottom grooves, it could cause the player to break down.

Removing a disc from the magazine

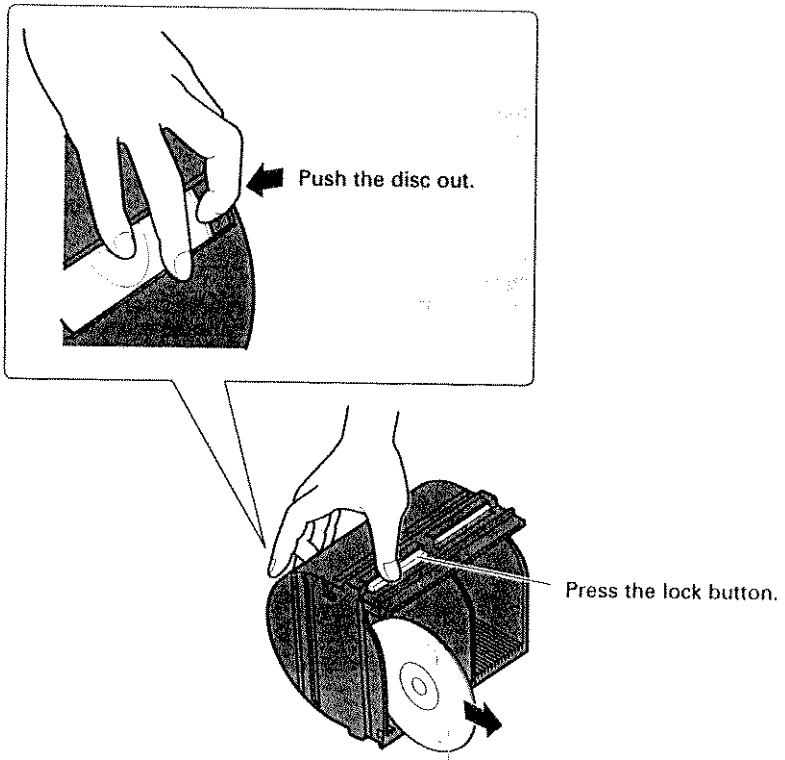

Be careful not to drop the disc that you have ejected with your finger.

Loading the magazine

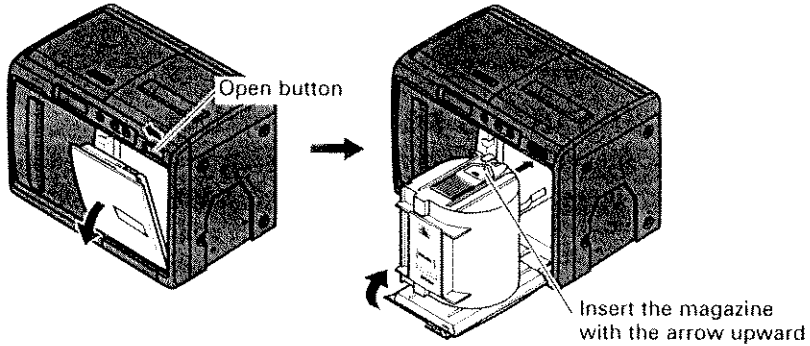

Slide the Open button and open the door.

Push the magazine in until it locks, then close the door.

- Always keep the door closed except when loading or unloading a magazine. The player will not operate if the door is open.
- Do not pull on a magazine when it is locked in place. It could cause the player to break down.

To remove the magazine

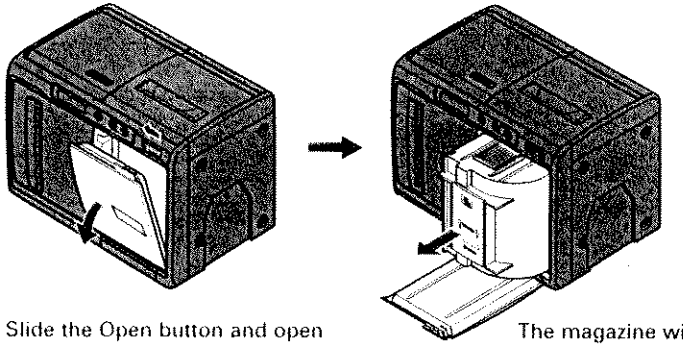

Slide the Open button and open the door.

The magazine will come out automatically.

MEMO

- If the door is not opened fully, the magazine will not come out.
- While a CD is being used in the extra tray, the magazine cannot be removed.

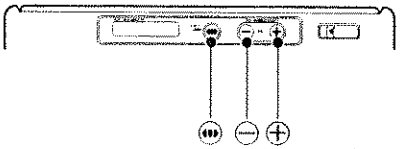

Loading the Discs in the magazine in the selected order

1. Set the source on Multi-CD. (See Page 11.)

If the Source is switched to a device other than Multi-CD, or the ignition switch is turned OFF, pressing ⏭ makes it possible to load one disc in the extra tray. In that case, complete this operation within a period of 8 seconds.

2. Inserting disc.

Loading a disc in the extra tray.

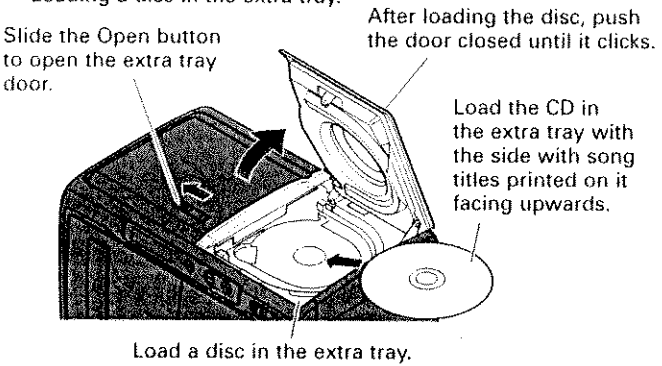
Slide the Open button to open the extra tray door.
After loading the disc, push the door closed until it clicks.
Load the CD in the extra tray with the side with song titles printed on it facing upwards.
Load a disc in the extra tray.

3. Press ⊕ or ⊖ to input the number of the disc you want to load.

This lights up if a disc is loaded in the extra tray. It blinks if the extra tray is open.

Number of disc you want to load

4. Press ⏭ to move the disc.

This is displayed while the disc is being moved.

Except when unloading or loading a disc, keep the door closed at all times. The player will not function if the door is open.

MEMO

- The open button will not work while the extra tray is functioning.
- If 50 discs are loaded in a magazine, "FULL" is displayed and another disc cannot be loaded.

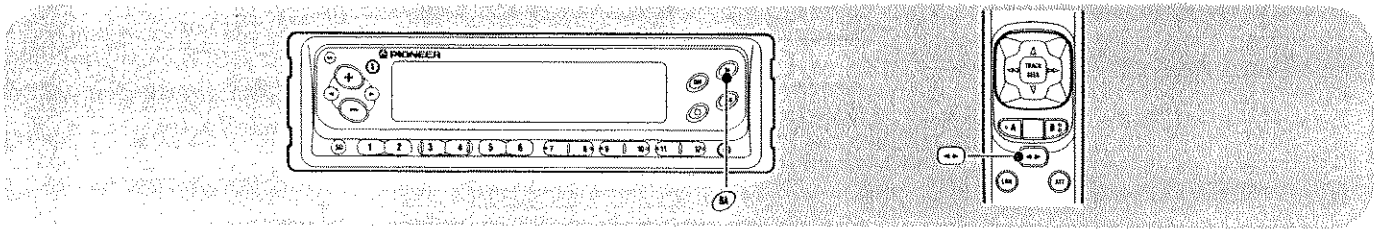

Unloading the Disc with the Selected Disc No. (Multi-CD Controller)

1. **Play the disc you want to unload. (See Page 12.)**
2. **Press (84) or (◄►) for 2 seconds or longer, then take the disc out.**

Slide the Open button to open the extra tray door.

After removing the disc, push the door closed until it clicks.

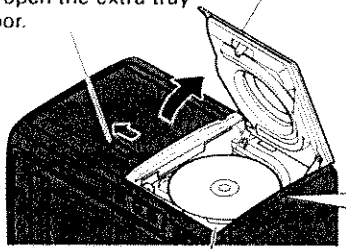

The disc unloads.

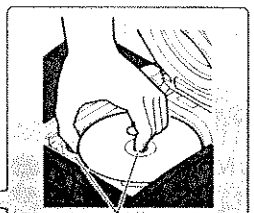

Place one finger in the groove in the player and another in center of the disc, pick up the disc and take it out.

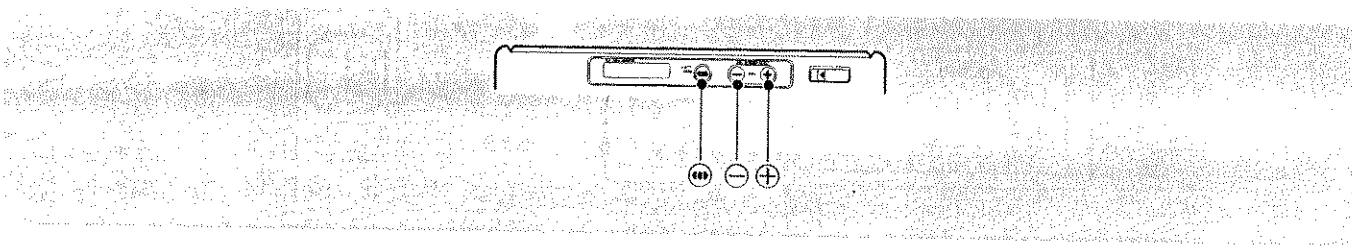

Unloading the Disc with the Selected Disc No. (This product)

1. **Set the source on Multi-CD. (See Page 11.)**
2. **Press ⊕ or ⊖ to input the number of the disc you want to unload.**

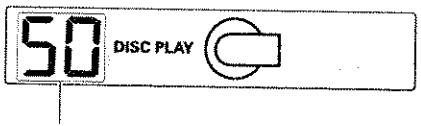

Number of disc you want to unload.

3. **Press ⏭ and take out the disc.**

This indicates that the disc is being ejected.

Except when unloading or loading a disc, keep the door closed at all times. The player will not function if the door is open.

MEMO

- This function will not operate if a disc is already loaded in the extra tray.
- If the Source is switched to Multi-CD, or the ignition switch is turned OFF, pressing ⏭ makes it possible to unload one disc only. Do this within a period of 8 seconds.
- Pressing ⏭ for 2 seconds or longer causes the disc in the magazine that is played the least to be ejected.

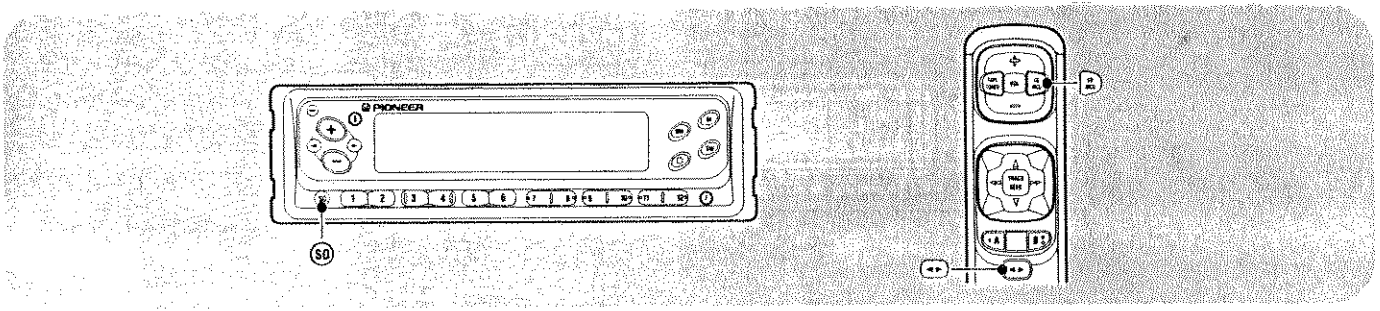

Start the CD player

■ **Multi-CD controller**

Press the (50) button until it becomes multi-CD.

■ **Remote controller**

Press the (CD MC) button until it becomes multi-CD.

Playing of the multi-CD begins and the 50-disc multi-CD operation state is displayed.

When 2 or more multi-CD players have been connected:

Press the (◄►) button until it becomes a 50-disc multi-CD.

50-disc multi-CD

When a magazine is set, it is checked automatically to determine if there are any discs inside. Also, concerning ITS Play, Music Group Play, Frequency Play, Disc eject, "ABC" Disc Title Search and other functions provided by the combined multi-CD controller, these will not operate if a disc has not been read. In that case, switch to a source other than the 50 Play Multi CD. During that time, the disc will be read automatically.

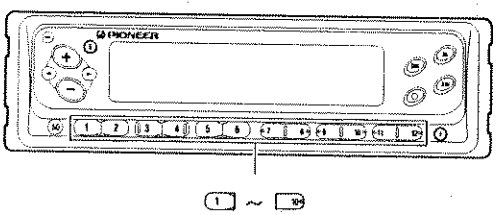

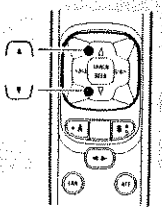

Select the disc you want to hear

■ **Multi-CD controller unit:**

1. **Clear the "FUNCTION" indicator.**
2. **After inputting the 10's position, input the 1's position using 1 ~ 10.**

   For discs with a single digit number, input 10 in the 10's position, then input the 1's position.

Disc number

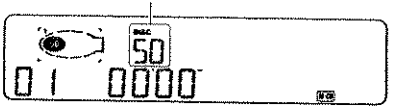

■ **Remote Controller:**

∧: When selecting the next CD.
∨: When selecting the previous CD.

Press ◄► for two or more seconds, and then select the disc with the use of the volume button when selecting discs from KEH-P4450. (The disc symbol will bink.) Operations will return to the normal play status if another button is not pressed once the disc has blinked or no operations are performed within a period of 8 seconds.

MEMO

If 50 discs are loaded in a magazine, "FULL." is displayed. A 51st disc can be loaded in the extra tray and ordinarily can be played.

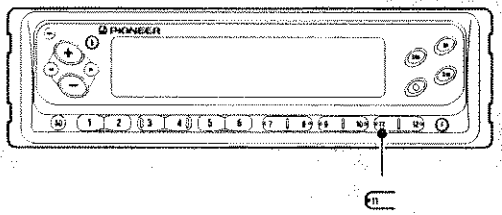

Selecting the Play Mode

1. **Clear the "FUNCTION" indicator.**
2. **Press** [n] .

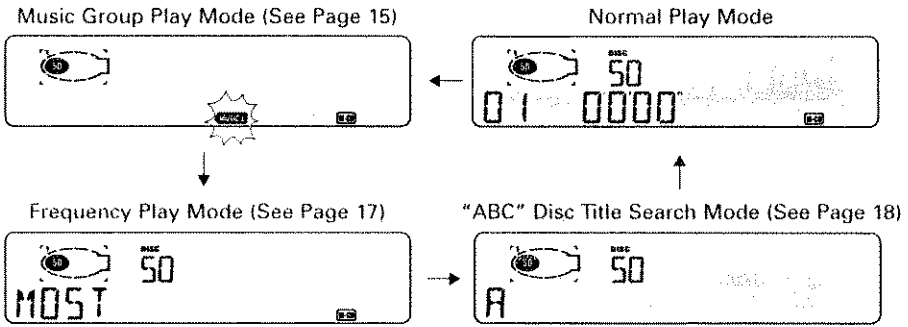

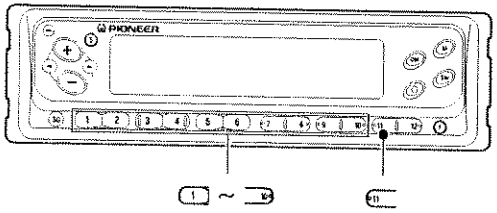

Dividing up Discs into Groups

1. Playing discs divided into groups. (See Page 12.)
2. Press 11 and enter the music group play mode.

3. Select the group from 1 ~ 10.

Ex: 1 ROCK1

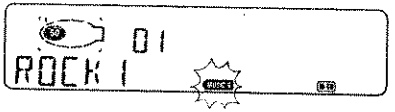

1 ROCK 1	6 CLASSIC
2 ROCK 2	7 GROUP 1
3 POPS	8 GROUP 2
4 JAZZ	9 GROUP 3
5 INSTRMNT	10 GROUP 4

4. Press 11 for 2 seconds or longer to save your selection.

When a selection is saved, the indicator stops blinking for a short time.

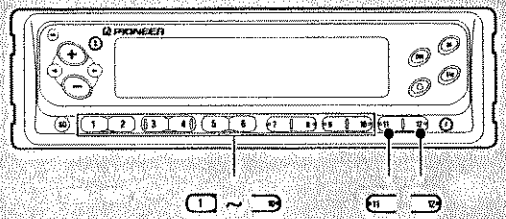

Playing a Group

1. **Press 11 and enter the music group play mode. (See Page 13.)**
2. **Select the group from 1 ~ 12.**

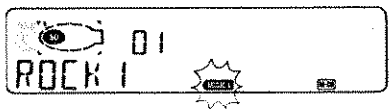

3. **Press 12 for 2 seconds or longer to play the group.**

   Press 12 to cancel the group play mode.

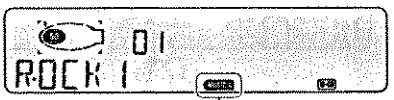

The indicator goes on when playing starts.

MEMO

- Playing will not begin until all the discs have been read.
- A specific disc within a group cannot be selected.
- It is possible to display the group by switching to the display mode.

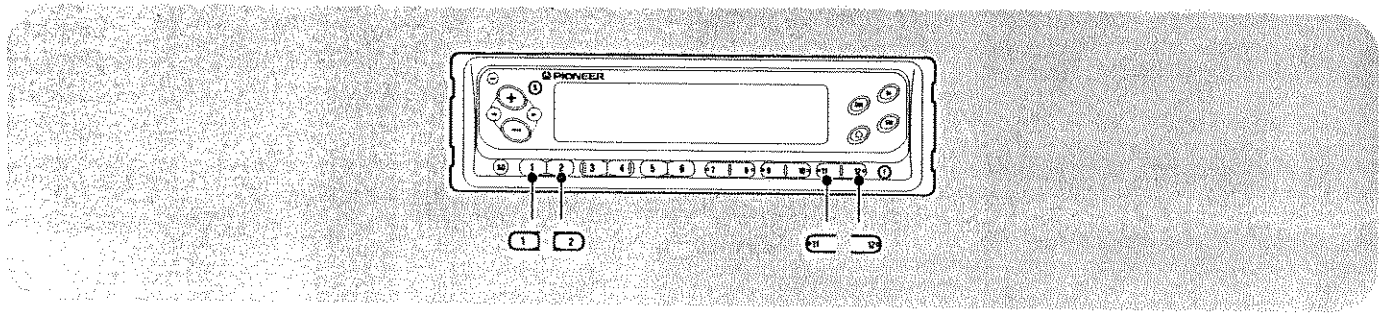

Deleting a disc from a music group

1. Play the disc that you want to delete from the music group. (See Page 12, 15.)
2. Press [11] and enter the music group play mode.

3. Press the button for the group, selected from [1] ~ [10], for 2 seconds or longer to delete the disc.

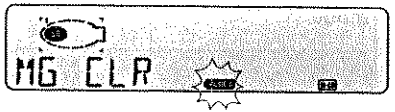

MEMO

- Playing of the next disc in the group begins. After a disc is deleted from a group, "EMPTY" is displayed when the disc saved in the group is removed.
- If the wrong music group button is pressed in step 3, the disc cannot be deleted.

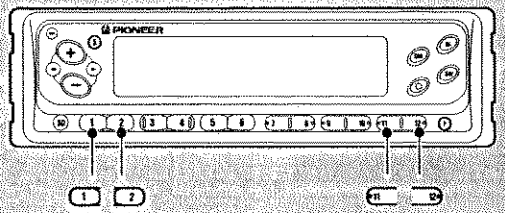

Playing discs that are listened to daily separately from discs that are seldom listened to

1. **Press (11) to enter the Frequency Play mode. (See Page 13.)**

2. **Let (1) be a disc you listen to frequently, (MOST), and let (2) be the disc you seldom listen to, (LEAST).**

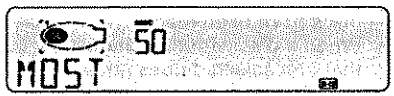

3. **Press (12) for 2 seconds or longer to Frequency play the disc.**

Pressing (12) once more cancels the frequency play mode.

MEMO

- Playing cannot begin until all the discs have been read.
- Discs can be selected by their playing frequency using (∧) (∨) on the Remote Controller.
- It is possible to check the playing frequency by switching to the "FRQNCY P" display mode.
- Depending on the case, "FRQNCY P" may not be displayed during playing, but frequency play will be executed.

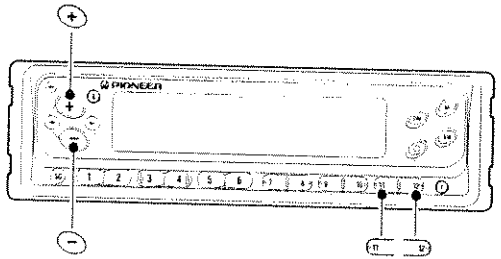

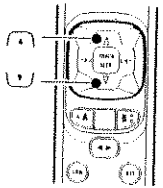

Playback from Disc Title

1. Press (11) to set the "ABC" disc title search mode. (See Page 13.)

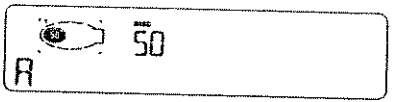

2. Press (+), (∧), or (−), (∨) to select the title characters.

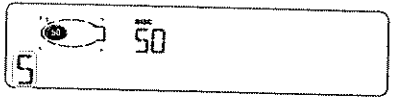

3 Press (12) and the selected disc title is displayed.

Each time (12) is pressed, the disc title for the selected header letters is displayed.

4. Press (12) for 2 seconds or longer to play the disc.

MEMO

- Playing cannot begin until all the discs have been read.
- When a disc with title characters that you selected does not exist, the "NO TITLE" message blinks in the display.

Display shows this message

Take action according to the chart below.

Check discs and magazine once more.

If it still doesn't work after checking.

Press the CD player's Clear button. (See Page 20.)

If it still doesn't work.

Read "In case of trouble" and request servicing.

Ex. E-11, Err-11, ERR-11, ERROR-11

Message	Cause	Treatment
11, 12, 14, 17	Dirt or a scratch on the disc stops the laser beam from being able to focus.	Wipe off the dirt. Exchange the disc if it has been scratched. (See Page 20.)
30	Dirt or a scratch on the disc hinders the track number search function.	
11, 14, 17	The disc has been inserted upside down.	Confirm that the disc has been inserted right side down. (See Page 5.)
14	An unrecorded compact disc (CD-R), which can be recorded on once is being used.	When you use a CD-R, load one that has been recorded on.
75, 90	The door is open.	Close the door.
80	There is no disc in the magazine.	Load a disc into the magazine. (See Page 5.)
04, 10, 11, 12, 14, 17, 19, 26, 30, 50, 60, 67, 70, 72, 74, 76, 90, A0	Electrical or mechanical system fault.	Turn the car ignition switch off and on again, or press power ON/OFF button on the display unit, and start the CD playing again.

Pressing the Clear Button

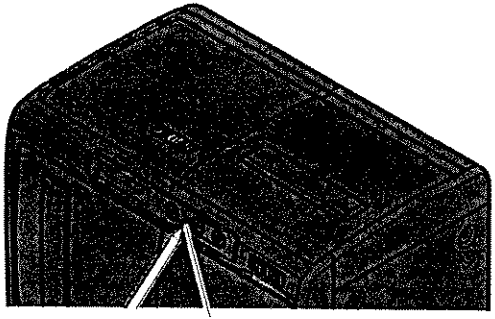

Clear button

After connecting everything up, press the clear button with the tip of a pencil. If the power will not switch on, or if the CD player does not operate, when the button on the control unit is pressed, or if the control unit display is incorrect, press this button with the tip of a pencil to restore normal operation. **Always press the clear button on the multi-CD controller, too, after pressing this button.**

- If the clear button is pressed when the player contains a magazine or the ignition switch is set to the ON or ACC position, the CD title display and ITS memory are cleared.

Discs

COMPACT disc DIGITAL AUDIO

- With this unit, use discs bearing the above marks.

- Check all CDs before playing, and discard cracked, scratched or warped discs.
- Avoid touching the recorded (iridescent) surface when handling discs.
- Do not affix labels or apply chemacals to discs.

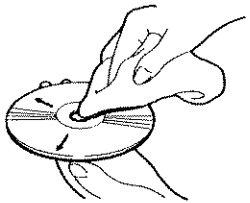

- Wipe dirty or damp discs outward from the center with a soft cloth.
- Keep discs out of direct sunlight and high temperatures.

Removing the Transport Screws

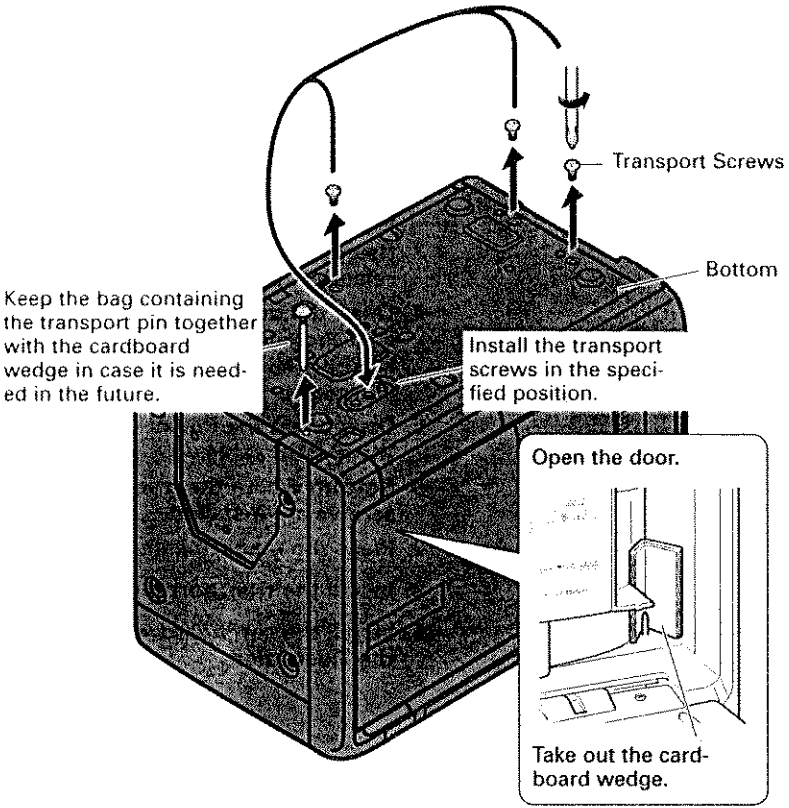
Transport Screws
Bottom
Keep the bag containing the transport pin together with the cardboard wedge in case it is needed in the future.
Install the transport screws in the specified position.
Open the door.
Take out the cardboard wedge.

In order to protect the set while it is being transported, transport screws and a pin are installed. Before installation of the unit begins, remove the transport screws and pin and keep them on hand in case they are needed in the future. Install the three transport screws in specified positions, then place the transport pin and the cardboard wedge in the bag the unit came in.

Transporting the Player to a New Location

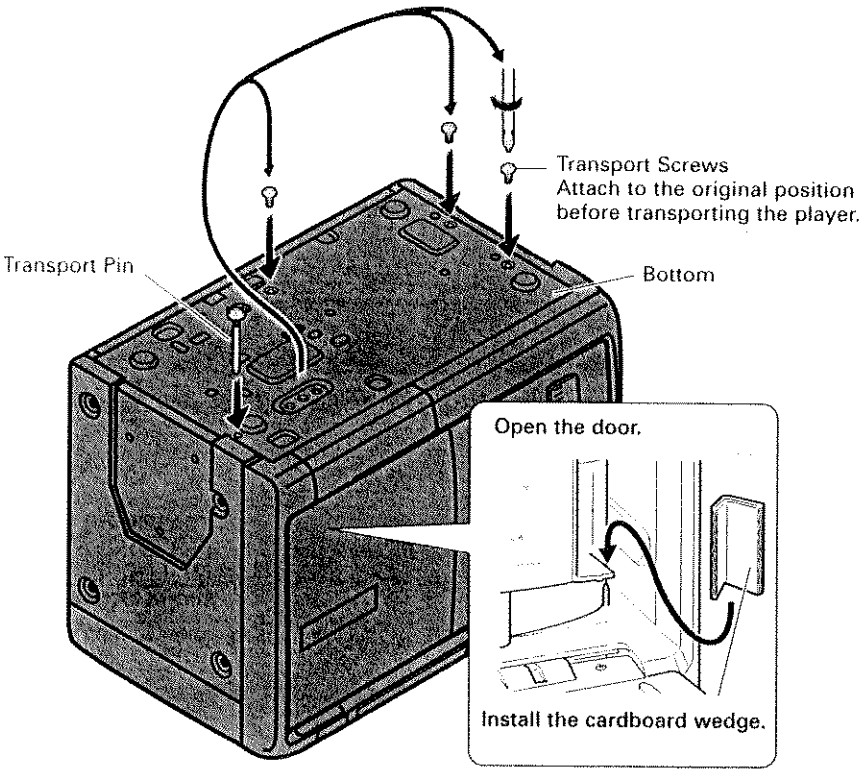

When retransporting the unit, use the following procedure, installing the transport screws, pin and the cardboard wedge in the positions they were in when the unit was first transported.

1. **Switch the power on.**
2. **Press ⏭ while pressing the Clear button.**
3. **Release the Clear button and release the ⏭.**
4. **Open the door (magazine side).**
   If the Procedure is correct, "------" will be displayed for the player display's disc number display.
5. **Disconnect the Power Cord and the IP-BUS cable.**
6. **Bottom where the transport screws are installed.**
7. **Place the magazine inside.**
8. **Install the transport pin.**
9. **Install the cardboard wedge per the illustration.**

CD Player unit

System ..... Compact disc audio system
Usable discs ..... Compact Disc
Signal format
..... Sampling frequency: 44.1 kHz
Number of quantization bits: 16; linear
Power source
..... 14.4 V DC (10.8 – 15.1 V allowable)
Max. current consumption ..... 1.0 A
Weight ..... 5.0 kg
Dimensions
..... 300 (W) × 238 (H) × 201 (D) mm

Note:
Specifications and the design are subject to possible modification without prior notice due to improvements.